



---

## **AUDI A4 EXIT WARNING**

The exit warning is activated when the new Audi A4 and Avant stop moving. If other vehicles are approaching from behind, it warns occupants as they open the doors. The system warns drivers by means of LED fiber optics in the inside door-opening mechanism (contour lighting). In situations that are assessed as dangerous, special high-performance red LEDs blink and light up. The exit warning stays on for approximately three minutes after the ignition is turned off.

Status: 09/2015