



---

## Audi A4 rear cross traffic assist

The rear cross traffic assist is activated when the parking assist is turned on. When this occurs, drivers who are slowly driving backwards (for example, while leaving a parking spot at right angles to the road) are warned about approaching vehicles in critical range. There are different levels of warnings: visual, acoustic and a short jolt of the brakes. The back radar sensors provide the necessary data.

Status: 09/2015